



Electrical and Computer Engineering

Computer Design Lab – ENCS4110

ARM Data-processing Instructions


Objectives

1. To investigate Arithmetic Operations and more other instructions.
2. To implement them in Keil uVision5.

ARM Registers and the Conventions of Use

As mentioned in the previous lab, ARM has 16 programmer-visible registers and a *Current Program Status Register*, CPSR.

Here is a picture to show the **ARM register set**.

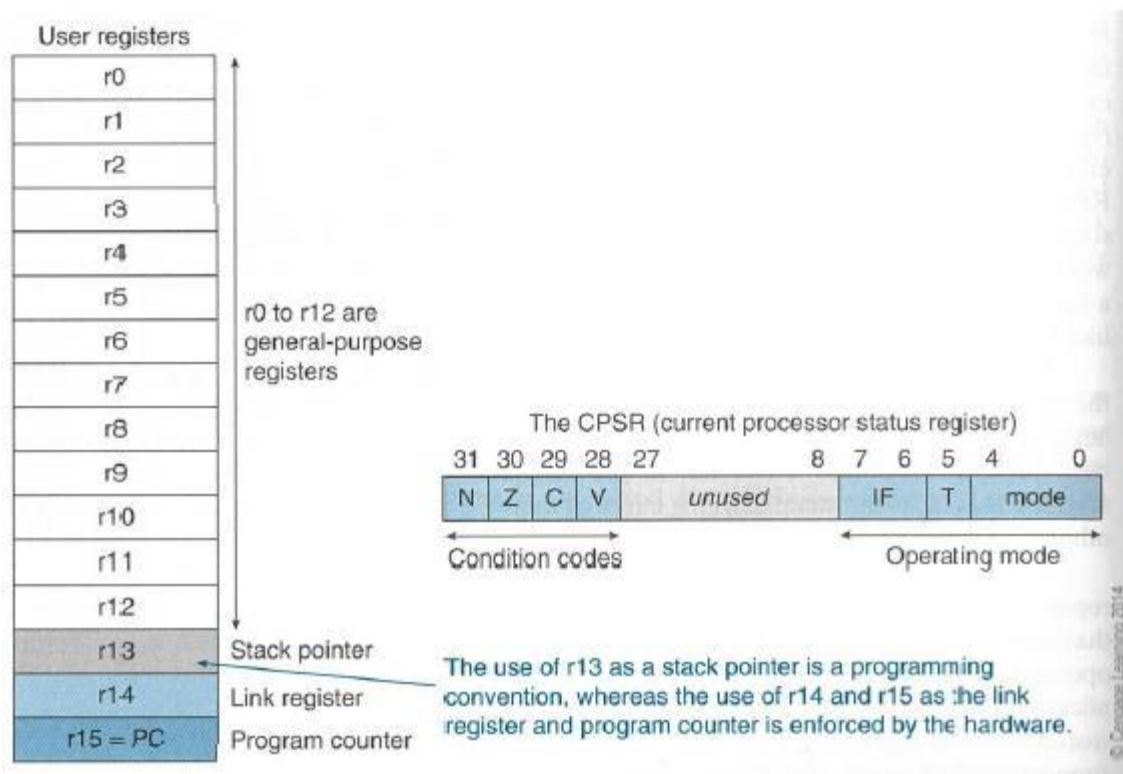

R0 to R12 are the general-purpose registers.
 R13 is reserved for the programmer to use it as the stack pointer.
 R14 is the link register which stores a subroutine return address.
 R15 contains the program counter and is accessible by the programmer.

CPSR: current program status register (32 bit)
 Stores the status of the previous ALU operation.
 4 flags
 N = 1, if result was negative
 Z = 1, if result was zero
 C = 1, if result had a carry-out
 V = 1, if result was an overflow
 These can be used to make decisions later on.

Each ARM instruction is encoded into a 32-bit word. Access to memory is provided only by Load and Store instructions.

ARM data-processing instructions operate on data and produce new value.

They are not like the branch instructions that control the operation of the processor and sequencing of instructions.

ARM instructions have the following general format:

```
Label Op-code operand1, operand2, operand3 ; comment
```

Arithmetic Instructions

Arithmetic instructions are very basic and frequently used in your ARM programming. Here is a table that demonstrates the usage of the ARM processor's arithmetic instructions with examples.

Instruction	Mnemonic	Meaning
Addition	ADD R0, R1, R2	; R0 = R1 + R2
Addition	ADDS R0, R1, R2	; R0 = R1 + R2, ; and FLAGS are updated
Subtraction	SUB R1, R2, R3	; R1 = R2 - R3
Subtraction	SUBS R1, R2, R3	; R1 = R2 - R3, ; and FLAGS are updated
	SUBS R7, R6, #20	; R7 = R6 - 20 ; Sets the flags on the result
Reverse Subtraction	RSB R4, R4, #120	; R4 = 120 - R4
Multiply	MUL R0, R1, R2	; R0 = R1 * R2
	UMULL R0, R4, R5, R6	; Unsigned (R4,R0) = R5 * R6
	SMLAL R4, R5, R3, R8	; Signed (R5,R4) = (R5,R4) + R3 * R8
Division	SDIV R0, R2, R4	; Signed divide, R0 = R2/R4

```
-----
UDIV  R8, R8, R1      ; Unsigned divide, R8 = R8/R1.
-----
```

Examples of Move Instructions

Mnemonic	Meaning
MOV R1, #0xFA05 ;	Write value of 0xFA05 to R1, flags are not updated
MOVS R11, #0x000B ;	Write value of 0x000B to R11, flags get updated
MOVS R10, R12 ;	Write value in R12 to R10, flags get updated
MOV R3, #23 ;	Write value of 23 to R3
MOV R8, SP ;	Write value of stack pointer to R8
MVNS R2, #0xF ;	Write value of 0xFFFFFFFF0 (bitwise inverse of 0xF) to the R2 and update flags.


Logical Operation Instructions

```
-----
AND R9, R2, R1      ; R9 = R2 AND R1
-----
AND R9, R2, #0xFF00 ; R9 = R2 AND #0xFF00
-----
ORR R9, R2, R1      ; R9 = R2 OR R1
-----
ORR R9, R2, #0xFF00
-----
ORREQ R2, R0, R5
-----
ANDS R9, R8, #0x19
-----
EOR R7, R11, R10    ; R7 = R11 XOR R10
-----
EORS R7, R11, #0x181818
-----
BIC R0, R1, #0xab    ; R0 = R1 AND (NOT(#0xab))
-----
ORN R7, R11, R14, ROR #4 ; R7 = R11 OR (NOT(R14 ROR #4))
-----
ORNS R7, R11, R14, ROR #2 ; update the flags
-----
```

Conditional Execution of Instructions

Each ARM instruction is encoded into a 32-bit word.

The basic encoding format for the instructions such as Load, Store, Move, Arithmetic, and Logic instructions, is as follows:

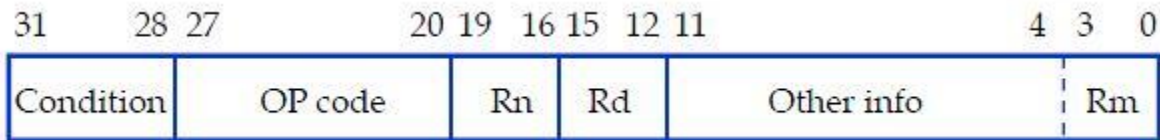

An instruction specifies a conditional execution code (Condition), the OP code, two or three registers (Rn, Rd, and Rm), and some other information.

Here is a more detailed description.

31-28	27	26	25	24-21	20	19-16	15-12	11-0
cond	0	0	I	opcode	S	Rn	Rd	Operand 2

- ▶ Rn = source register operand 1
- ▶ Rd = destination register
- ▶ 31-28: condition code
 - ALL arm instructions can be conditionally executed
 - eg: ADDEQ
 - add, but only if the previous operation produced a result of zero
 - checks CPSR stored from previous operation

All the ARM instructions are conditionally executed depending on a condition specified in the instruction(bits 31-28).

<u>CONDITION</u>		<u>Flags</u>	<u>Note</u>
0000	EQ	Z==1	Equal
0001	NE	Z==0	Not Equal
0010	HS/CS	C==1	>= (U) / C=1
0011	LO/CC	C==0	< (U) / C=1
0100	MI	N==1	minus(neg)
0101	PL	N==0	plus(pos)
0110	VS	V==1	V set(ovfl)
0111	VC	V==0	V clr
1000	HI	C==1&&Z==0	> (U)
1001	LS	C==0 Z==1	<= (U)
1010	GE	N==V	>=
1011	LT	N!=V	<
1100	GT	Z==0&&N==V	>
1101	LE	Z==1 N!=V	<=
1110	AL	always	
1111	NE	never	

(U) = unsigned

- The instruction is executed only if the current state of the processor condition code flag satisfies the condition specified in bits b31-b28 of the instruction.

For example:

```
CMP R0, #25 ; flags are updated according to (R0 - #25)
ADDGT R1, R2, #12
```

- The instructions whose condition does not meet the processor condition code flag are not executed.
- One of the conditions is used to indicate that the instruction is always executed.

Examples of Shift Instructions

```
-----
LSL R4, R5, #2 ; Logical shift left by 2 bits
-----
```

```
LSR R4, R5, #6 ; Logical shift right by 6 bits
-----
```

```
LSLS R1, R2, #3 ; Logical shift left by 3 bits with flag update
-----
```

```
ROR R4, R5, R6 ; Rotate right by the value in the bottom byte of R6
-----
```

```
RRX R4, R5 ; Rotate right with extend (one bit only).
-----
```

Here are two links for your references.

1. [ARM general data processing instructions](#) from ARM Information Center.
2. [Cortex-M3 Devices Generic User Guide](#). Section 3.5 and 3.6.

An Example of Using Arithmetic Instructions

```
;The semicolon is used to lead an inline documentation
;
;When you write your program, you could have your info at the top document block
;For Example: Your Name, Student Number, what the program is for, and what it does
etc.
;
;    This program will calculate the value of the following function:
;    f(x) = 5x^2 - 6x + 8   when x = 7.
;

;;; Directives
        PRESERVE8
        THUMB

; Vector Table Mapped to Address 0 at Reset
; Linker requires __Vectors to be exported

        AREA    RESET, DATA, READONLY
        EXPORT  __Vectors

__Vectors
        DCD     0x20001000      ; stack pointer value when stack is empty
        DCD     Reset_Handler  ; reset vector

        ALIGN

; The program
; Linker requires Reset_Handler

        AREA    MYCODE, CODE, READONLY

        ENTRY
        EXPORT  Reset_Handler

Reset_Handler

;;;;;;;;;;User Code Start from the next line;;;;;;;;;;

        MOV     R0, #7          ; x = 7

        MUL     R1, R0, R0      ; R1 = x^2
        MOV     R4, #5
        MUL     R1, R1, R4

        MOV     R5, #6
        MUL     R2, R0, R5      ; R2 = 6x

        SUB     R3, R1, R2      ; R3 = 5x^2 - 6x
        ADD     R3, R3, #8      ; R3 = 5x^2 - 6x + 8
```

```

        ALIGN
STOP

        B    STOP

        END                ; End of the program

```

Load and Store Instructions

To access memory, we can only use Load and Store instructions.

```

LDR dest, expression
LDR R6, [R4]      ; load R6 with the value in the memory whose address is in R4

STR STR{cond} srce,[base],offset

STR R0,[R1]          ; store R0 in the byte address R1
STR R0,[R1,#20]       ; store R0 in the byte address R1+20
STR R0,[R1,R2,LSL#2]  ; store R0 in the address given by R1+R2*4

Examples:
LDR    R0, NUM          ; load R0 with the value of NUM in memory
LDR    R6, = NUM        ; Load the address of NUM to R6
MOV    R0, #0x001C      ; Load the value to the R0
STR    R0, [R6]         ; Store the value in R0 to NUM

```

Another Example

```

;The semicolon is used to lead an inline documentation
;When you write your program, you could have your info at the top document block
;For Example: Your Name, Student Number, what the program is for, and what it does
etc.
;
;    See if you can figure out what this program does
;

;;; Directives
        PRESERVE8
        THUMB

; Vector Table Mapped to Address 0 at Reset
; Linker requires __Vectors to be exported

        AREA    RESET, DATA, READONLY
        EXPORT  __Vectors

__Vectors
        DCD    0x20001000      ; stack pointer value when stack is empty
        DCD    Reset_Handler ; reset vector

        ALIGN

;Your Data section
;AREA DATA

SUMP    DCD SUM

```

```

NUM1 DCD 5
NUM2 DCD 7
; The DCD directive allocates one or more words of memory,
; aligned on four-byte boundaries,
; and defines the initial runtime contents of the memory.
;
; For example,    data1 DCD    1,5,20
; Defines 3 words containing decimal values 1, 5, and 20

        AREA    MYRAM, DATA, READWRITE
SUM DCD 0

; The program
; Linker requires Reset_Handler

        AREA    MYCODE, CODE, READONLY

        ENTRY
        EXPORT Reset_Handler

Reset_Handler
;;;;;;;;;;User Code Start from the next line;;;;;;;;;;

        LDR R1, NUM1
        LDR R2, NUM2

        MOV R0, #0

        ADD R0, R1, R2
        SUBS R0, R0, #1

        LSL R3, R0, #2           ; Logical shift left by 2 bits with flag update

        LDR R4, SUMP
        STR R3, [R4]

        LDR R6, [R4]

        ALIGN
STOP
        B    STOP

        END

```


Lab work:

You can convert temperatures from Celsius to Fahrenheit or from Fahrenheit to Celsius. Here are the two formulas for your reference.

$$C = 5 * (F - 32) / 9$$

$$F = (9 * C / 5) + 32$$

Write an ARM assembly language program **convertF2CandC2F.s**.

You will do the following:

1. You can put the Fahrenheit temperature, say 70, in the register R0;
 2. and have the converted temperature in Celsius in the register R1.
 3. You can put a Celsius temperature, say 22 in register R2;
 4. and have the converted temperature in Fahrenheit in the register R3.
 5. Build the program if there are any bugs, fix them.
 6. Run the program step by step and see how values are changing in the registers.
 7. Make a screenshot to capture the results in your designated registers.
-

You will hand in the following:

1. The source code in the file **convertF2CandC2F.s**
2. The screenshot to show the program has been successfully built
3. The screenshot showing the converted temperatures in the registers